

**Non-contact 3D Digitizer**

# ***RANGE7/RANGE5***

Instruction Manual

 Read and understand all instructions before using.



**KONICA MINOLTA**

# Safety Symbols

---

The following symbols are used in this manual to prevent accidents which may occur as a result of incorrect use of the instrument.



**Denotes a sentence regarding a safety warning or note.**  
**Read the sentence carefully to ensure safe and correct use.**



**Denotes a prohibited operation.**  
**The operation must never be performed.**



**Denotes an instruction.**  
**The instruction must be strictly adhered to.**



**Denotes an instruction.**  
**Disconnect the AC adapter from the AC outlet.**



**Denotes a prohibited operation.**  
**Never disassemble the instrument.**

## Notes on This Manual

- Copying or reproduction of all or any part of the contents of this manual without KONICA MINOLTA's permission is strictly prohibited.
- The contents of this manual are subject to change without prior notice.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact the nearest KONICA MINOLTA-authorized service facility.
- KONICA MINOLTA will not accept any responsibility for consequences arising from the use of the instrument.

# Foreword

## About the packing materials contained in your product package

- Please ensure that you carefully keep the packing materials (corrugated cardboard, cushion materials, and plastic bags) contained in your product package.
- The RANGE7/5 is a precision measuring instrument. If you transport the RANGE7/5 to our factory for the purpose of maintenance (repair, etc.), you should use the packing materials contained in the product package in order to minimize impact and shock during transportation. If any of the packing materials are lost or damaged, please contact a KONICA MINOLTA-authorized service facility.

## Notes On Use

- We shall guarantee the RANGE7/5 operation at 10°C to 40°C ambient temperature and 65% or less relative humidity. Ensure that the RANGE7/5 operating environment is within this range.
- The RANGE7/5 has been calibrated at 20°C. It is recommended that this instrument should be used at a room temperature of 20°C.
- The RANGE7/5 has been designed for indoor use. Do not use this instrument outdoors.
- Do not use the RANGE7/5 in a place exposed to direct sunlight in summer, or near a heater. The RANGE7/5 temperature becomes much higher than the ambient temperature, causing a fault of the instrument. Use the RANGE7/5 in a well-ventilated place. Do not block the ventilation port.
- Do not use the RANGE7/5 in a dusty place, or in a place with high humidity. Otherwise, there may be a fault with the instrument.
- Do not strike or apply strong vibration to the RANGE7/5. Otherwise, the instrument may have a fault.
- Do not use the RANGE7/5 near a high-rise building or a road with heavy traffic. If the RANGE7/5 and the targets being measured shake, the RANGE7/5 may not obtain accurate measurement results.
- Do not overturn the RANGE7/5. Otherwise, the instrument may have a fault.
- Do not disconnect any cable while the RANGE7/5 is ON (while Power button is lit yellow-green.) Otherwise, there may be a fault with the instrument.
- The RANGE7/5 is a class 2 laser instrument as specified in IEC Publication 60825-1. Handle this instrument properly by observing the instructions given in this manual.
- Use the RANGE7/5 at an altitude of 2000 m max.
- When you use the RANGE7/5 for the first time, or after transportation, make sure that the lens is securely fastened. If the lens becomes loose, tighten it securely by following the lens exchanging procedure.

## Care On Storage

- The RANGE7/5 should be stored in areas with temperatures of between -10°C and +50°C. Do not store it in areas subject to high temperature or high humidity or where sudden changes in temperature or condensation are likely to occur. We recommend storing the RANGE7/5 around room temperature (20°C) with a desiccant (silica gel etc.).
- Do not leave the RANGE7/5 inside a closed car or in the trunk of a car. Under direct sunlight, the increase in temperature can be extreme and may result in malfunctions.
- When shipping the product, use the original packing materials in which the product was shipped. The materials will provide protection against vibrations and impact, and also provide some protection against sudden changes in temperature.
- The RANGE7/5 should not be stored in areas where there is an excessive amount of dust, cigarette smoke or chemical gas. Failure to adhere to this may result in performance degradation or break-down.
- When lenses are not in use, attach the lens and mount caps and store the lenses in the exclusive case.
- When storing the RANGE7/5 with lens attached, put the lens cap on the lens.

## Notes On Cleaning

- If the RANGE7/5 needs cleaning, wipe with a soft dry cloth. Never use solvents such as thinner or benzene.
- If the lens or laser emitting window is dirty, blow off sand or dust using a blower. If the lens is still dirty, wipe the lens gently with a piece of cleaning paper dampened with a cleaning agent.
- In cases of malfunction, do not disassemble the RANGE7/5 or attempt to repair it yourself. Contact the nearest KONICA MINOLTA-authorized service facility.

## Disposal Method

- Make sure that the RANGE7/5, accessories and the packing materials are either disposed of or recycled correctly in accordance with local laws and regulations.

# Laser Label Indication

## Warning and instruction labels about the laser





**レーザ光**  
 ビームをのぞき込まないこと  
**LASER RADIATION**  
**DO NOT STARE INTO BEAM**  
 MAX 34mW 660nm  
 クラス2レーザ製品 CLASS 2 LASER PRODUCT  
 Complies with IEC Publication  
 60825-1 Ed. 2.0:2007

Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No.50, dated June 24, 2007  
**KONICA MINOLTA, INC.**  
 3-91 Daisennishimachi, Sakai-ku, Sakai, Osaka 590-8551, Japan  
 — manufactured —

**RANGE7/5**

**<FRONT>**

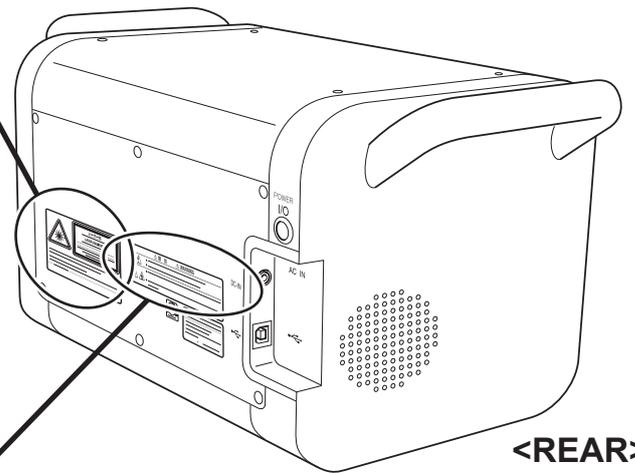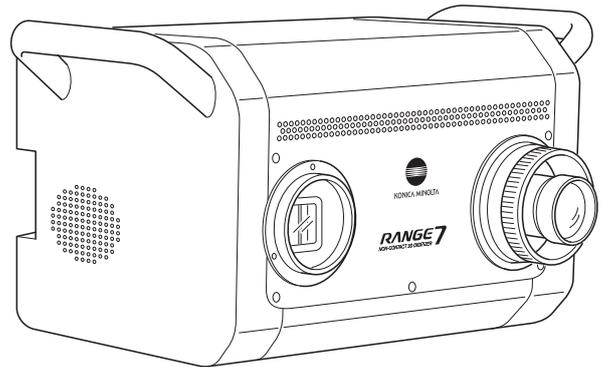

**<REAR>**

## Other warning label



**警告 WARNING**

- 
 ● ご使用前には、必ず取扱説明書をよくお読みください。  
 ● Read and understand all instructions before using.
- 

 ● 本機を改造あるいは分解しないでください。火災、感電、または傷害の原因になります。  
 ● Risk of electric shock, fire or injury, not modify or disassemble this instrument.

# About this Manual (Contents)

This instruction manual provides the following contents about preparations for use of the RANGE7/5.

- Precautions for Use
- Part Names and Functions
- System Configuration and Accessories
- Setup Procedure for Measurement with the RANGE7/5
- RANGE7/5 Measuring Steps (Images)
- Measuring Principle of the RANGE7/5
- RANGE7/5 Specifications and Accessories

In this manual, illustrations of RANGE7 are used. The product name printed on the front side of RANGE5 is different.

## Contents and Descriptions

Safety Symbols


Notes on This Manual

Safety Precautions .....	1
Foreword .....	2
About the packing materials contained in your product package .....	2
Notes On Use .....	2
Care On Storage .....	2
Notes On Cleaning .....	2
Disposal Method .....	2
Laser Label Indication .....	3
Warning and instruction labels about the laser .....	3
Other warning label .....	3
About this Manual (Contents).....	4
Contents and Descriptions .....	4
About the RANGE7/5 .....	5
■ System Diagram .....	5
<RANGE7> .....	5
<RANGE5> .....	6
■ Names of Parts and Functions .....	7
■ Dimensions .....	8
Installation and Setup .....	9
■ Installation .....	9
1) Direct installation on table .....	9
2) Installation using tripod set (under optional accessories) .....	9
3) Installation using the measuring stand set (under optional accessories) .....	10
■ Setup .....	11
1) Installing the RANGE7/5 .....	12
2) Setting the RANGE7/5's position relative to the measuring target, and exchanging the lens (RANGE7 only) .....	12
3) Connecting the AC adaptor .....	14
4) Connecting the RANGE7/5 to a PC .....	14
5) Turning power on/off .....	15
■ About Field Calibration .....	16
Measuring Steps (Images) .....	17
■ Installation and Measurement (Image) .....	17
■ Shooting and Focusing (Image).....	18
■ Scanning (Image) .....	18
Troubleshooting .....	19
Other Information .....	20
■ Measuring Principles .....	20
■ Specifications .....	21

# About the RANGE7/5

## ■ System Diagram <RANGE7>

—— Standard accessories  
 - - - - - Optional accessories

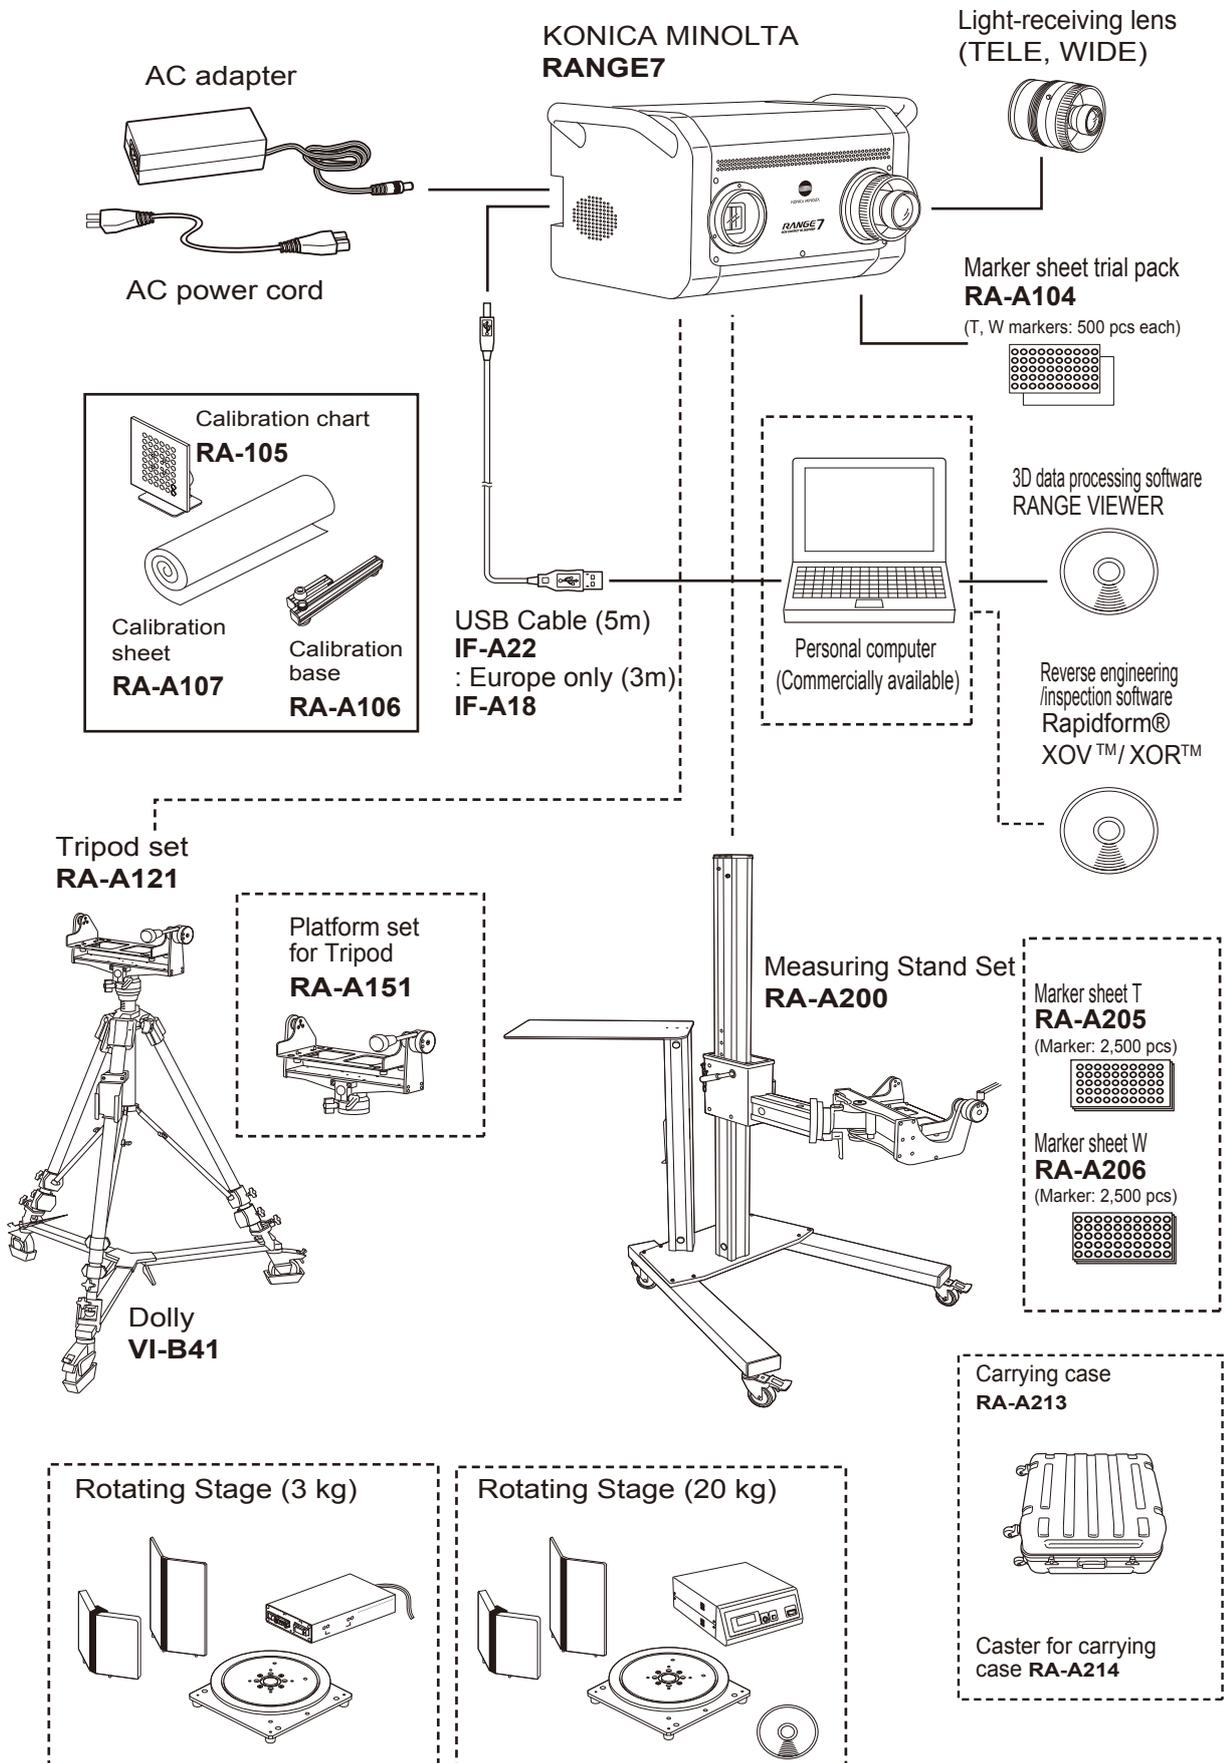


———— Standard accessories  
 - - - - - Optional accessories


# <RANGE5>

## KONICA MINOLTA RANGE5

AC adapter

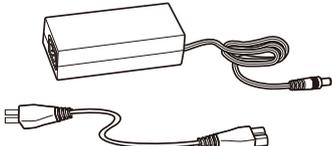


AC power cord

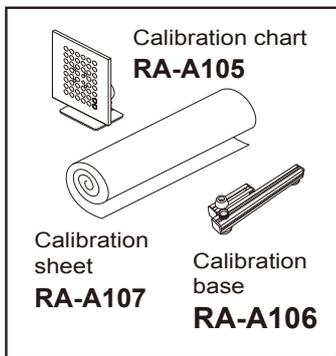


USB Cable (5m)  
**IF-A22**  
 : Europe only (3m)  
**IF-A18**

Marker sheet trial pack  
**RA-A108**  
 (Marker: 500 pcs)



3D data processing software  
**RANGE VIEWER**

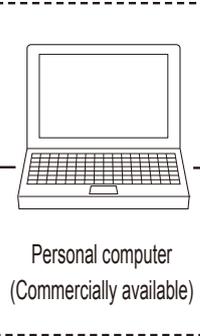


Personal computer  
 (Commercially available)

Reverse engineering  
 /inspection software  
**Rapidform®**  
**XOV™ / XOR™**



Tripod set  
**RA-A121**

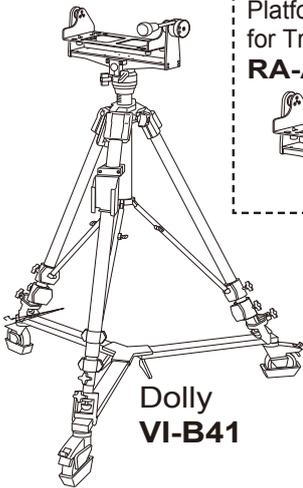


Dolly  
**VI-B41**




Platform set  
 for Tripod  
**RA-A151**


Measuring Stand Set  
**RA-A200**

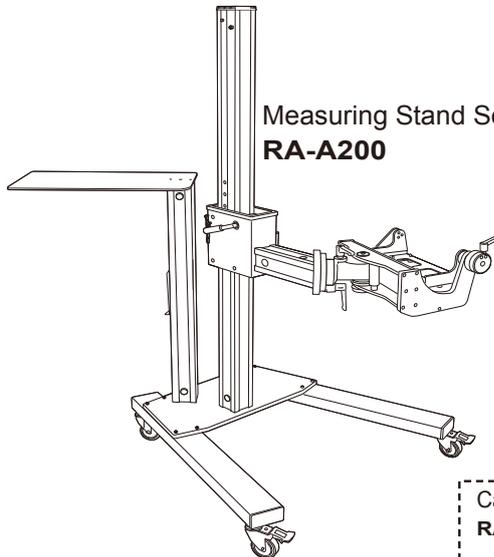

Marker sheet W  
**RA-A206**  
 (Marker: 2,500 pcs)




Carrying case  
**RA-A213**

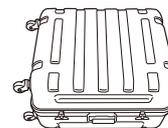


Caster for carrying  
 case **RA-A214**


Rotating Stage (3 kg)

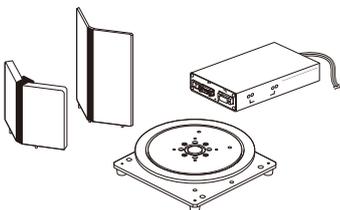

Rotating Stage (20 kg)

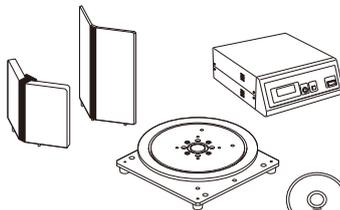







## ■ Names of Parts and Functions

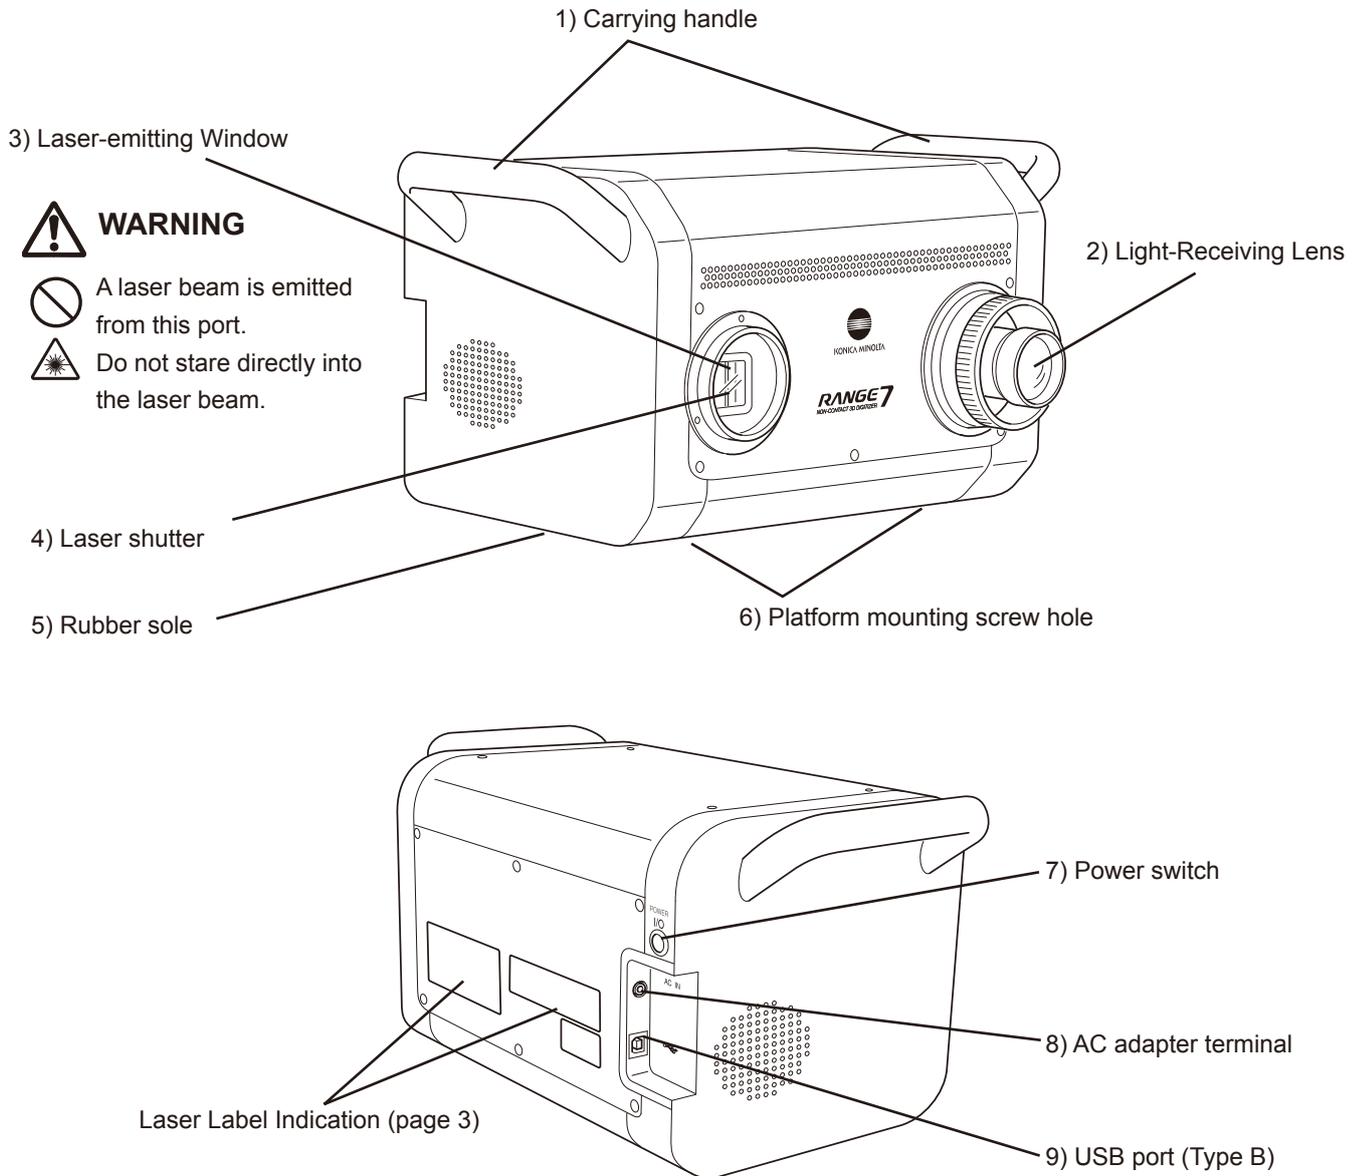

- |  |   |
|--|---|
| <b>1) Carrying handle</b>              | Used to lift or carry the RANGE7/5. (Be sure to hold the RANGE7/5 body with both hands.)  |
| <b>2) Light-receiving lens</b>         | Exchange the light-receiving lens for an optimum lens (Tele or Wide lens), depending on the measuring target size and measuring distance.   |
| <b>3) Laser-emitting window</b>        | A laser beam is emitted to a measuring target from this window. (Do not stare directly into the laser beam.)  |
| <b>4) Lens shutter</b>                 | When the power is switched off, this shutter closes to protect the laser emitting window.   |
| <b>5) Rubber sole</b>                  | Four rubber soles are attached at the bottom of the RANGE7/5. To install the RANGE7/5 directly on a firm table, use these parts. Also, use the calibration chart set during field calibration (under standard accessories); or when mounting the RANGE7/5 to the tripod set, or measuring stand set (under optional accessories), use these parts to set the RANGE7/5 in place. |
| <b>6) Platform mounting screw hole</b> | Screw holes for fastening the RANGE7/5 to the measuring stand platform or tripod platform (under optional accessories).   |
| <b>7) Power switch</b>                 | Turns ON/OFF the RANGE7/5 power supply.   |
| <b>8) AC adaptor terminal</b>          | Connect the RANGE7/5 AC adaptor plug to this terminal.  |
| <b>9) USB port</b>                     | When connecting the RANGE7/5 to a PC, connect the USB cable (standard accessory) Type B plug.   |

# ■ Dimensions

(Unit: mm)

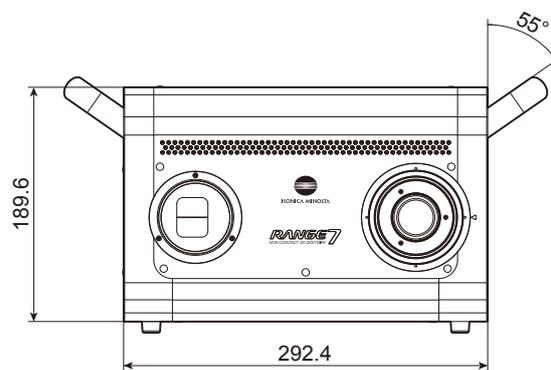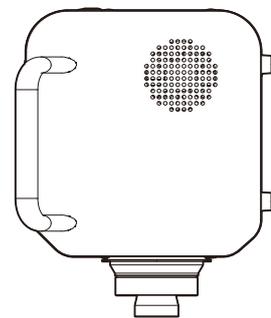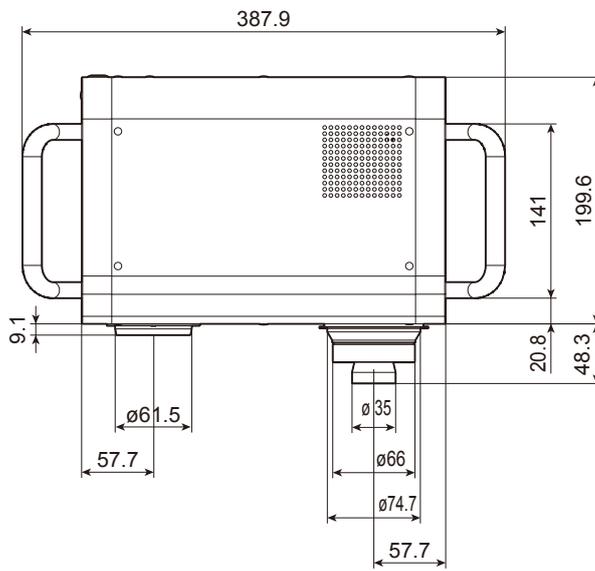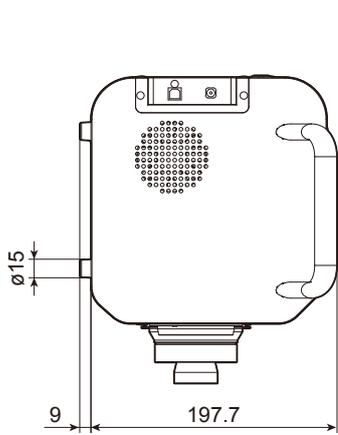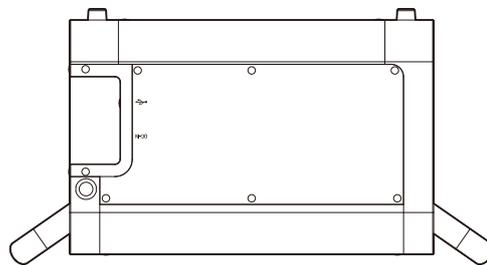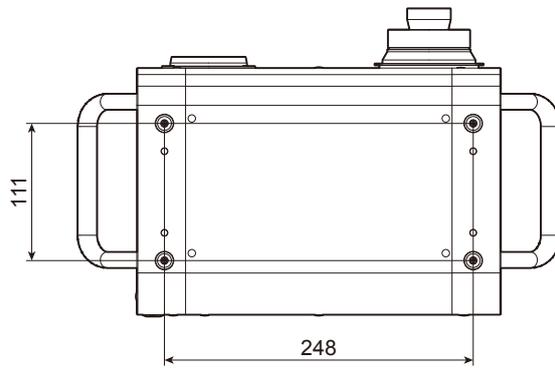

# Installation and Setup

## ■ Installation

This section describes the RANGE7/5 installation procedures and precautions for installation.

### <Installation procedure>

To install the RANGE7/5, you can use the following three methods:

- 1) Direct installation on a table or like surface (including a measuring table prepared by user)
- 2) Installation using tripod set (under optional accessories)
- 3) Installation using measuring stand set (under optional accessories)

### 1) Direct installation on table


The RANGE7/5 can be directly installed on a table or like surface by using the rubber soles at the bottom of the unit.

- NOTE**
- Install the RANGE7/5 on a firm, level table.
  - To install the RANGE7/5 on a table prepared by user, use a firm, level table wide enough to put to completely secure the four rubber soles.
  - When the RANGE7/5 is directly installed on a table, the RANGE7/5 may not obtain the correct measurement results depending on the position relative to the measuring target.  
In this case, use of the tripod set or measuring stand set (under optional accessories) is recommended.

### 2) Installation using tripod set (under optional accessories)

Mount the RANGE7/5 to the tripod platform (under optional accessories).

- NOTE**
- Before mounting the RANGE7/5, make sure that the tripod platform is properly mounted to the tripod.  
\* For the tripod platform to tripod mounting procedure, refer to the instruction manual with regards to the tripod platform.
  - When using the tripod set, tighten the lock lever for each part so that the tripod will not accidentally shake.
  - Install the tripod set on a firm floor. To move the tripod set, slide it slowly with the dolly (under optional accessories).

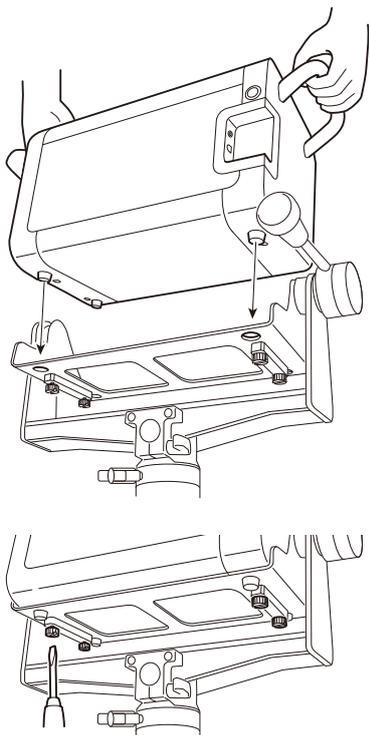

### [Mounting procedure]

- 1) Hold the tripod platform swing plate mounted to the tripod, set horizontally.
- 2) Hold the handles with both hands, and put the RANGE7/5 on the swing plate.  
\* Among the four rubber soles at the bottom of the RANGE7/5, the two soles on the rear side must fit securely into the swing plate positioning holes.
- 3) Insert the four screws on the back of the swing plate into the platform mounting screw holes at the bottom of the RANGE7/5, and turn the screws clockwise to tighten them securely.



**NOTE**

- When removing the RANGE7/5, perform the above procedure in the reverse order.
- Normally, the screws at the bottom of the swing plate will not come off. However, if the screws are forcibly turned from the RANGE7/5 removing position, the screws may come off.

### 3) Installation using the measuring stand set (under optional accessories)

Mount the RANGE7/5 to the measuring stand platform (under optional accessories).

- NOTE**
- Before mounting the RANGE7/5, make sure that the measuring stand platform is properly mounted to the measuring stand.
    - \* For the procedure on how to mount the measuring stand platform to the measuring stand, refer to the instruction manual for the measuring stand set.
  - When using the measuring stand, tighten the lock lever for each part so that the measuring stand will not accidentally shake.
  - Install the measuring stand on a firm floor. Do not step on the leg, or hang on the arm.

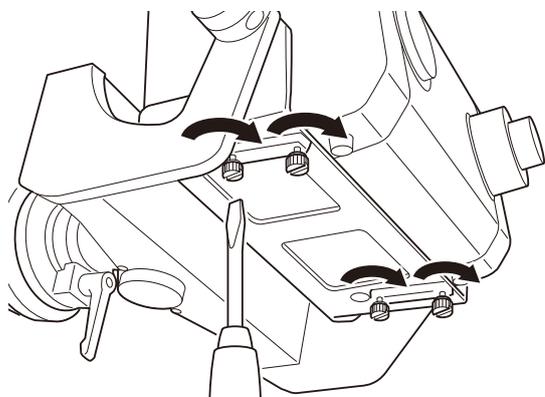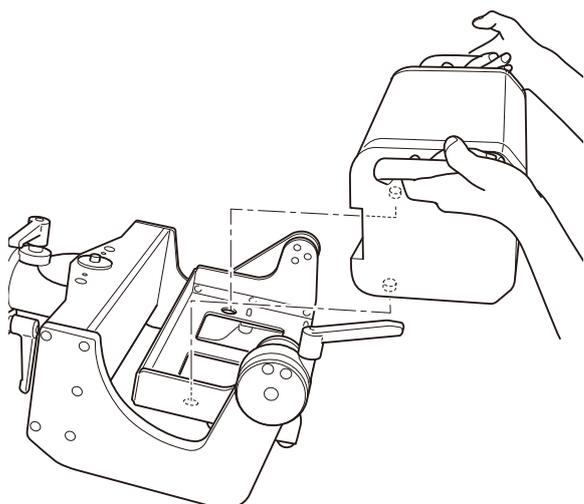

#### [Mounting procedure]

- 1) Hold the measuring stand platform swing plate horizontally mounted to the measuring stand arm.
- 2) Hold the handles with both hands, and put the RANGE7/5 on the swing plate.
  - \* Among the four rubber soles at the bottom of the RANGE7/5, the two soles on the rear side must securely fit into the swing plate positioning holes.
- 3) Insert four screws on the back of the swing plate into the platform mounting screw holes at the bottom of the RANGE7/5, and turn the screws clockwise to tighten them securely.


#### [NOTE]

- When removing the RANGE7/5, perform the above procedure in the reverse order.
- Normally, the screws at the bottom of the swing plate will not come off. However, if the screws are forcibly turned from the RANGE7/5 removing position, the screws may come off.

## ■ Setup

To execute measurement using the RANGE7, mount an optimum lens depending on the measuring target size and the measuring distance, and install the RANGE7 at an optimum position relative to the measuring target. (No replacement lens for RANGE5.)

The following is an example of the ordinary RANGE7/5 setup using the tripod setting (under optional accessories).

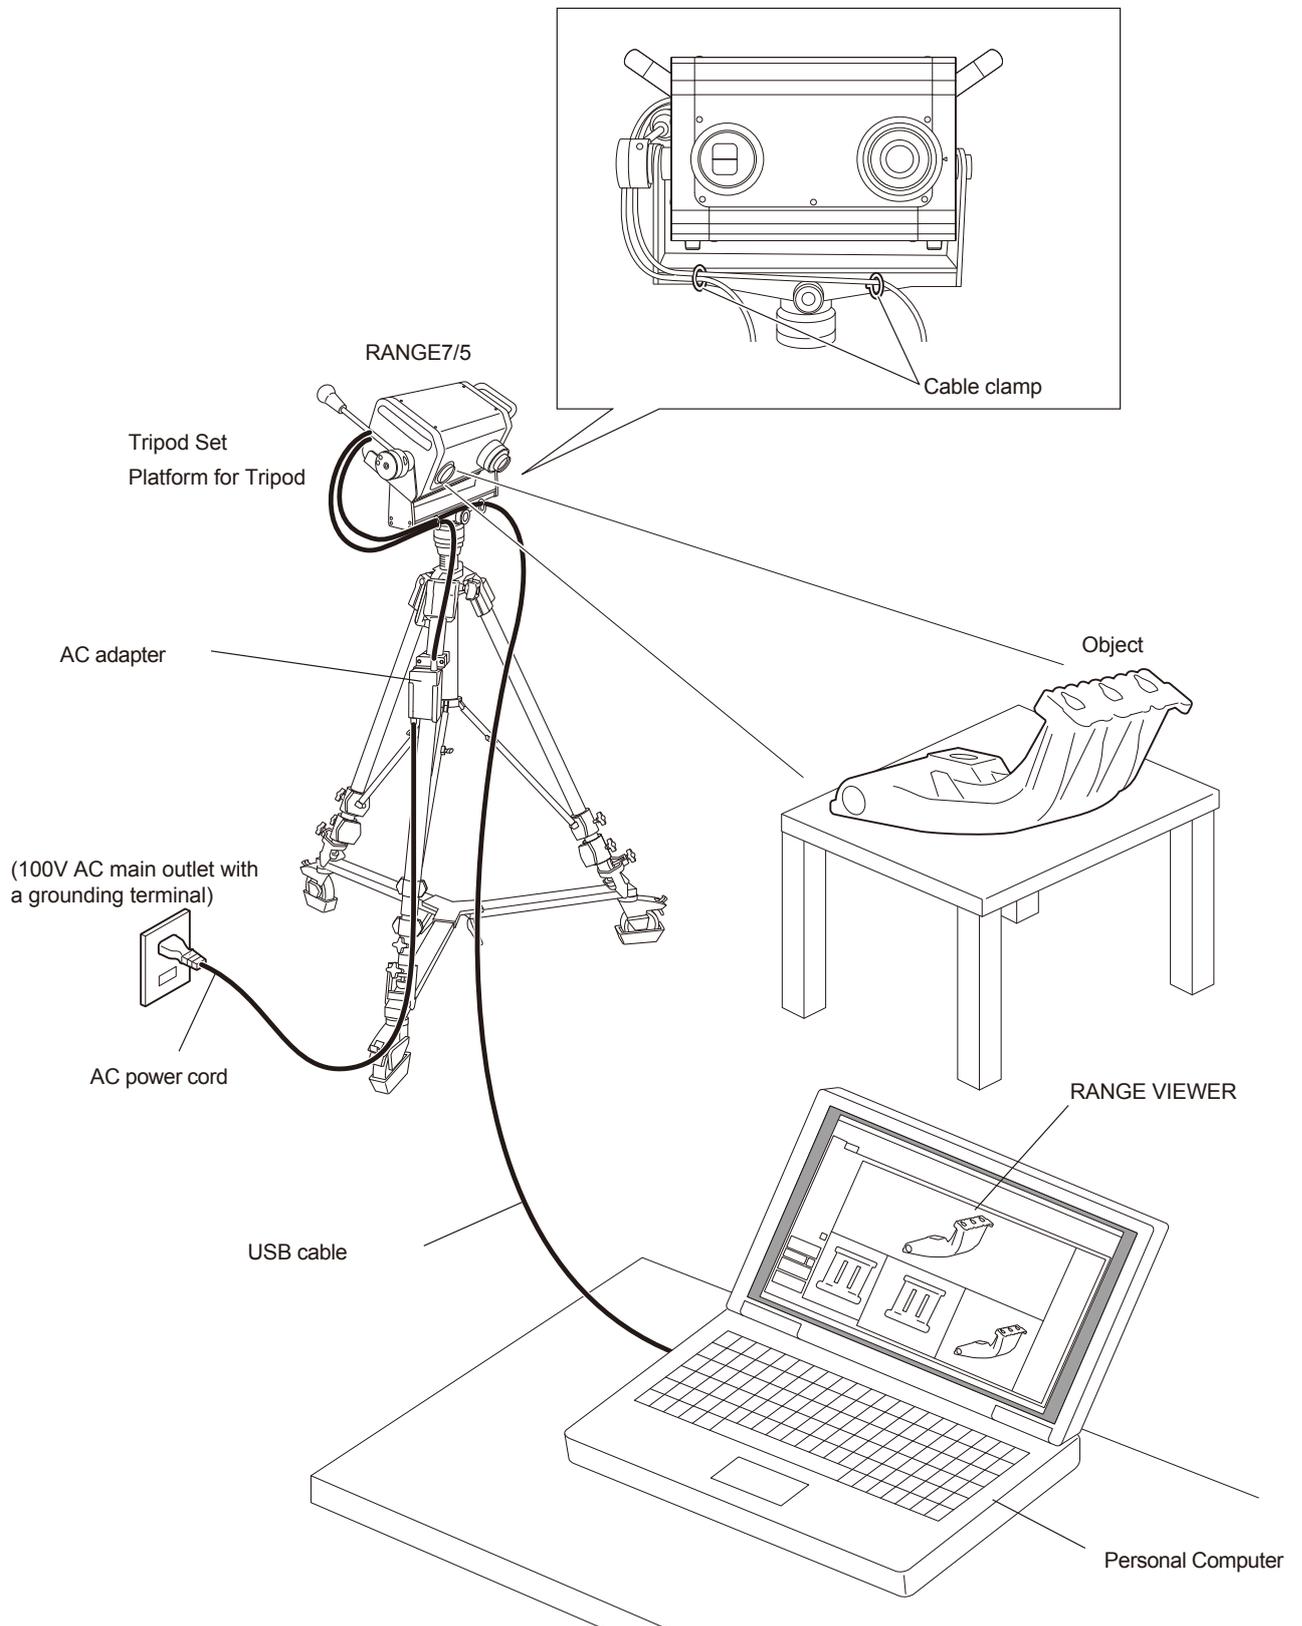

## <Setup procedure>

This section describes the procedure for installing the RANGE7/5 properly, and completing the preparations for measurement.

Make preparations according to the following procedures:

- 1) Installing the RANGE7/5.
- 2) Set the RANGE7/5 at a position relative to the proper target, and mount the lens suitable in question as the target of measure. (No replacement lens for RANGE5.)
- 3) Connect the AC adaptor to the RANGE7/5.
- 4) Connect the RANGE7/5 to a PC.
- 5) Turn ON the RANGE7/5 power switch to start warming up the RANGE7/5.

### 1) Installing the RANGE7/5


The RANGE7/5 can be directly installed on a table by using the rubber soles at the bottom. Also, it can be installed with the tripod set or measuring stand (under optional accessories). When the tripod set or measuring stand are used, the RANGE7/5 orientation can be freely changed (up/down and right/left). This feature is useful for measurement.

**Memo** For installation procedure details, please refer to the description on “Installation”.

### 2) Setting the RANGE7/5's position relative to the measuring target, and exchanging the lens (RANGE7 only)


#### Scan Position Adjustment

The location and posture of the work and RANGE7/5 can be adjusted so that the two are appropriately positioned for scanning. These adjustments are made by activating the monitoring feature and watching the work in the monitor window.

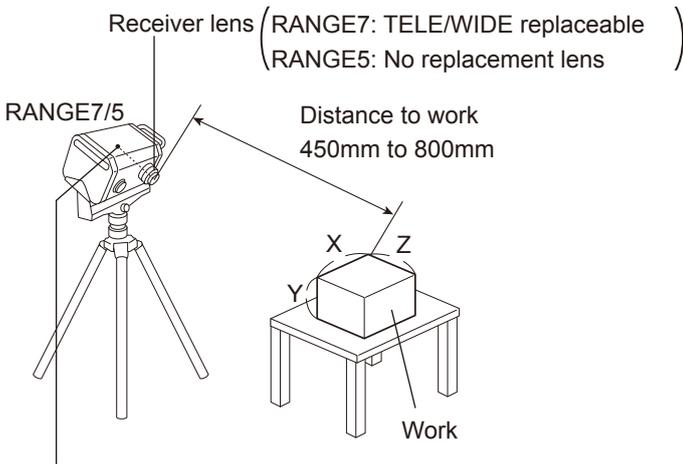

- The origin is set at the sensor position which is approximately 120 mm behind the center of the lens surface. Therefore, the Z dimension has an offset of around 120 mm applied.

#### RANGE VIEWER monitor window

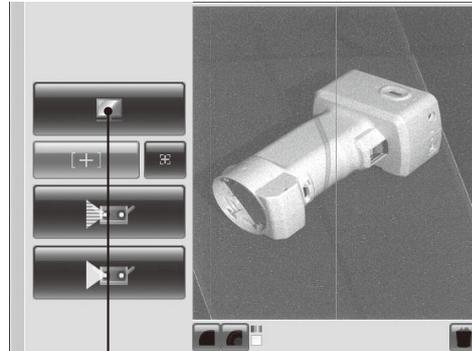

Click the [Monitor] button to check the work on the monitor window.

Distance to work and work size (Unit: mm)

Lens	TELE lens		WIDE lens	
	450	800	450	800
Distance	450	800	450	800
X×Y	79×99	141×176	150×188	267×334
Z	54	97	109	194

**Memo** For RANGE5, please refer to the WIDE lens data.

Distance to work and work size in MultiFocus mode

(Unit: mm)

Lens	TELE lens		WIDE lens	
	462	781	475	766
Distance	462	781	475	766
X×Y	81×102	138×172	159×199	256×320
Z	54	97	109	194

**Memo** For RANGE5, please refer to the WIDE lens data.


## Changing of Lens (RANGE7 only)

Set the RANGE7 at a position proper to the measuring target, and exchange the lens for an optimum one, depending on the measuring target size and the distance between the RANGE7 and the measuring target.

**NOTE** When changing the lens, confirm that the lens number is the same number as the RANGE7 body.

**Memo** RANGE7 needs to warm up for about 20 minutes after being switched ON. It is always possible to change lenses, but if the lens temperature is different from the main body temperature, it may result in inaccurate measurements.

To avoid this problem, change lenses before switching the RANGE7 ON, and warm-up the RANGE7 with the lens to be used attached. If the lens must be changed after the RANGE7 has already warmed up, wait at least 5 minutes for the lens temperature to adjust to the temperature of the RANGE7.

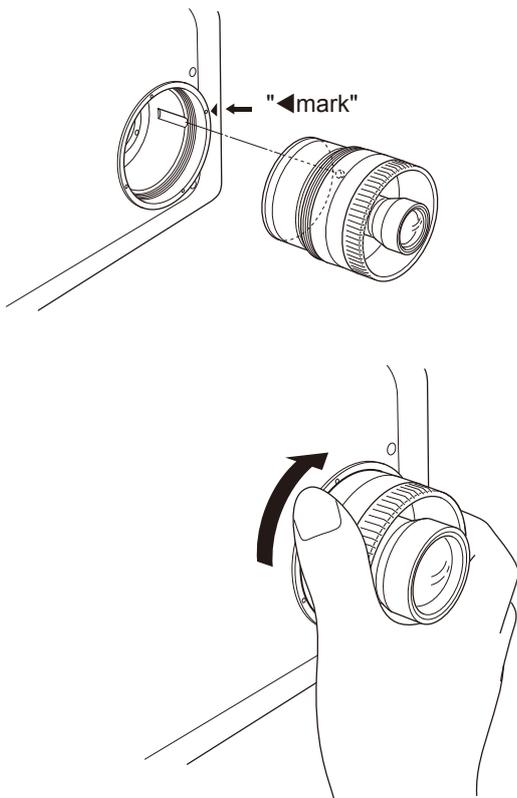

### [Lens exchanging procedure]


- 1) Turn the lens mounted to the RANGE7 counterclockwise by holding the lens barrel. After turning the lens to the hit position, pull it out straight slowly.
- 2) Align the side pin of the lens with the red ◀ mark on the RANGE7, and insert the lens straightly according to the inside guide.
- 3) After inserting the lens to the hit position, turn it clockwise by holding the lens barrel to tighten it securely.

### **NOTE**

- Remove the lens by reversing the attaching procedure.
- Be careful to avoid touching the lens surface when changing lenses.

### **Memo**


- Grease for lubrication has been applied to the screw for installation of the lens. When the RANGE7 is purchased, the screw of the lens not attached to the RANGE7 is wrapped with a transparent sheet for grease protection. Remove this sheet before use.
- When removing the lens, attach the mount and lens caps.

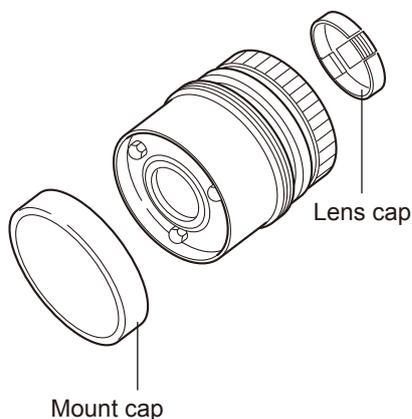

### 3) Connecting the AC adaptor

- 1) Connect the AC cable to the AC adaptor for the RANGE7/5.
- 2) Insert the AC adaptor plug of the dedicated AC adaptor (AC-A324) to the AC adaptor connection terminal on the right of the RANGE7/5 rear panel.
- 3) Insert the AC cable plug connected to the AC adaptor to a 100 V AC main outlet.

**NOTE** Insert the plug securely to the innermost position.

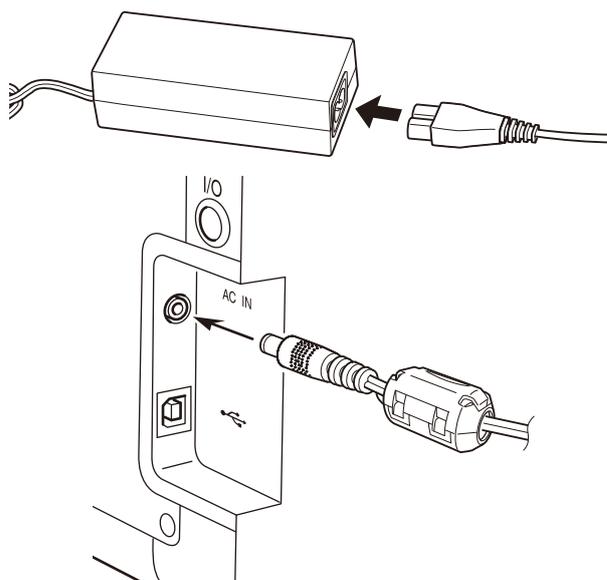

### 4) Connecting the RANGE7/5 to a PC



- 1) Insert the Type B plug of the dedicated USB cable to the USB port on the right of the RANGE7/5 rear panel.

**Memo** The USB connection port of the RANGE7/5 is equipped with the plug hold mechanism. First, when the plug is inserted, it will hit something. Then, you must further insert the plug securely to the innermost position.

- 2) Insert the end of the USB cable (Type A plug) into the USB port of the PC.

**NOTE**

- Insert the plug securely to the innermost position.
- During measurement with the RANGE7/5, or during data processing after measurement, do not disconnect the USB cable.

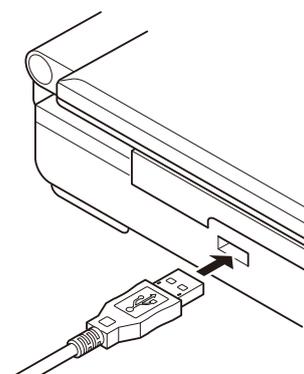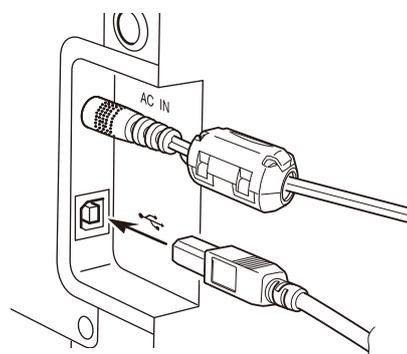

## 5) Turning power on/off

1) Push the white power button in the upper right part of the rear panel of the RANGE7/5.

A short beep sounds, the power is switched on, and the power button is lit yellow-green.

2) Warming-up of the RANGE7/5 starts when the laser shutter is opened.


### Memo

- RANGE7/5 needs to warm up for about 20 minutes after being switched ON.
- While the RANGE7/5 is warming up, a message that the RANGE7/5 is now warming up will appear on the screen of RANGE VIEWER software. This message will disappear when warming-up of the RANGE7/5 is completed.

3) Push the yellow-green-lit power button again. Two short beeps will sound, the power is switched off, and then the light of the power button will disappear.

### NOTE

- Do not turn the RANGE7/5 off during measurement or data processing after a measurement.
- When turning the power OFF, do not unplug the AC power cord from the AC outlet until the power light disappears.

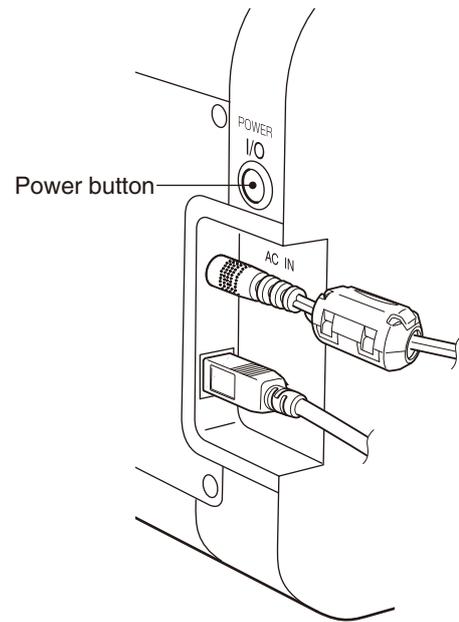

## ■ About Field Calibration


The figure below shows an example of setting up the RANGE7/5 for calibration using the Calibration Set.

Enough space is needed to spread out the sheet.  
1280×430 mm

Set the calibration chart in the position  
marked on the sheet for the lens being used.

**Memo**

For RANGE5, place in the  
position off the WIDE lens.

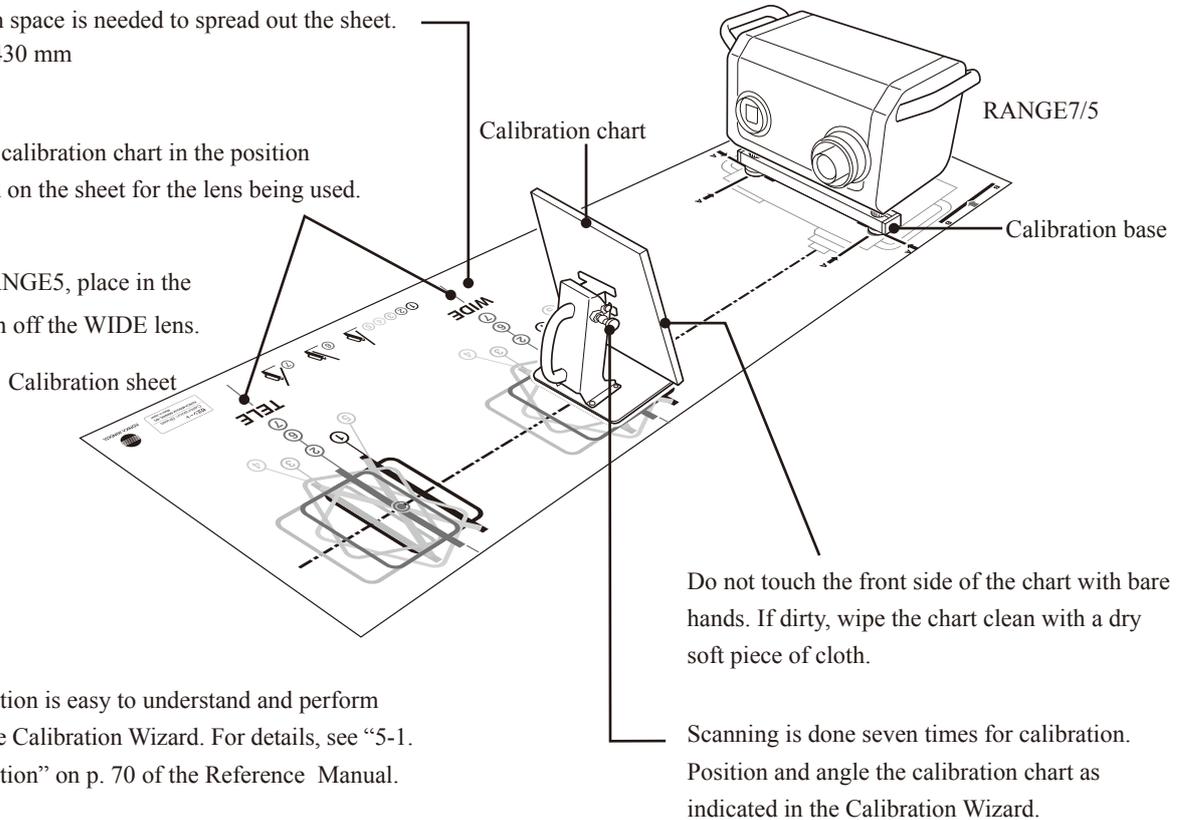

Calibration should be performed in the following cases:

- Before using for the first time after purchase.
- If the RANGE7/5 has not been used for a few days.
- If the ambient temperature during storage or use is drastically different from the ambient temperature at the time calibration was last performed.
- If the RANGE7/5 may have been subject to vibrations during shipping or movement.
- To achieve higher measurement accuracy.


**NOTE**

- The Calibration Chart has been calibrated using the RANGE7/5 unit with which it was shipped. When performing calibration, be sure to use the Calibration Chart with the same number as the RANGE7/5 body.
- Before performing calibration, confirm that the lens number is the same number as the RANGE7/5 body.


# Measuring Steps (Images)

## ■ Installation and Measurement (Image)


Example of installation on Measuring Stand Set RA-A200 (optional accessory)

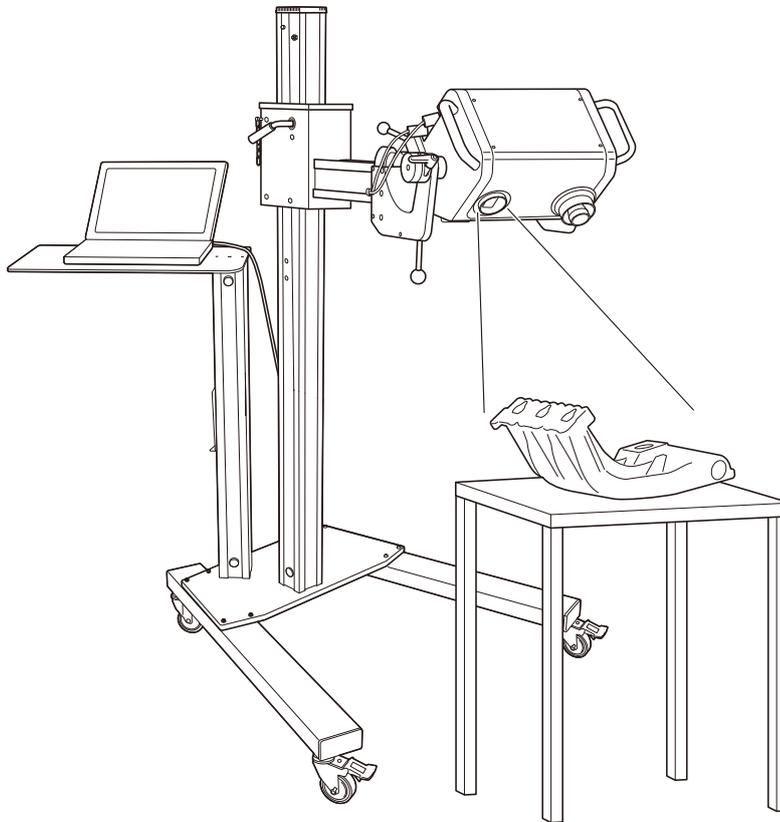


Example of installation on Tripod Set RA-A121 (optional accessory)

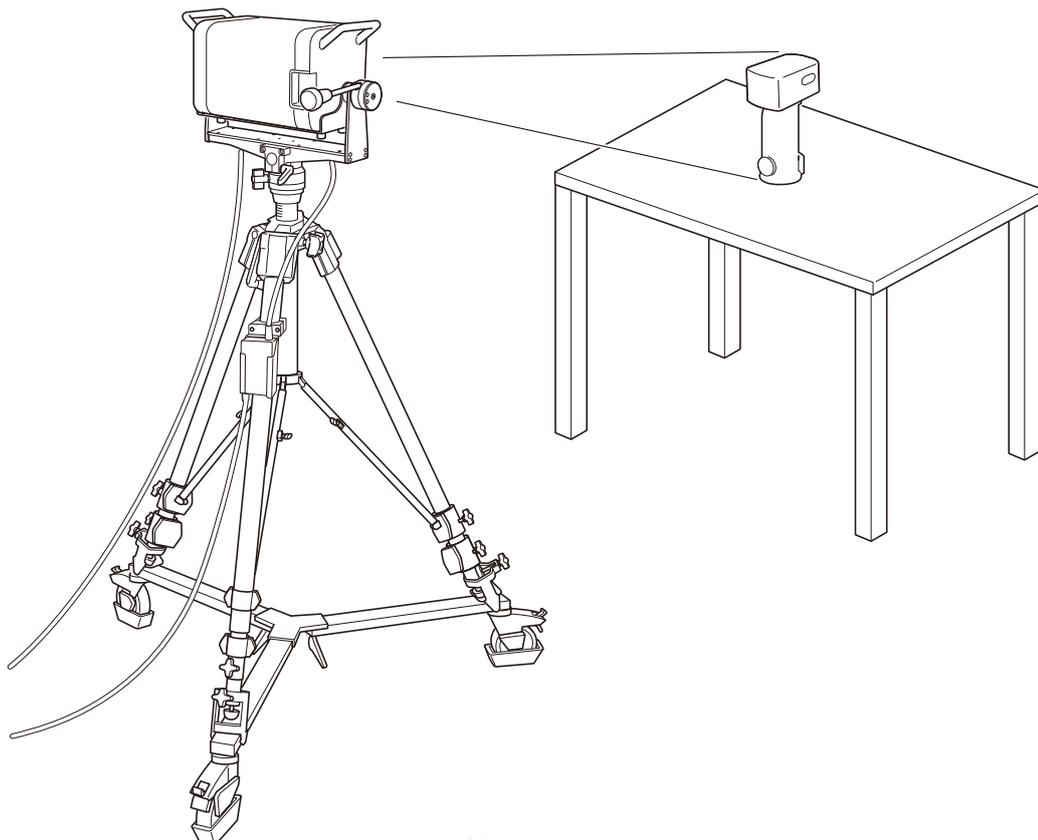

## ■ Shooting and Focusing (Image)

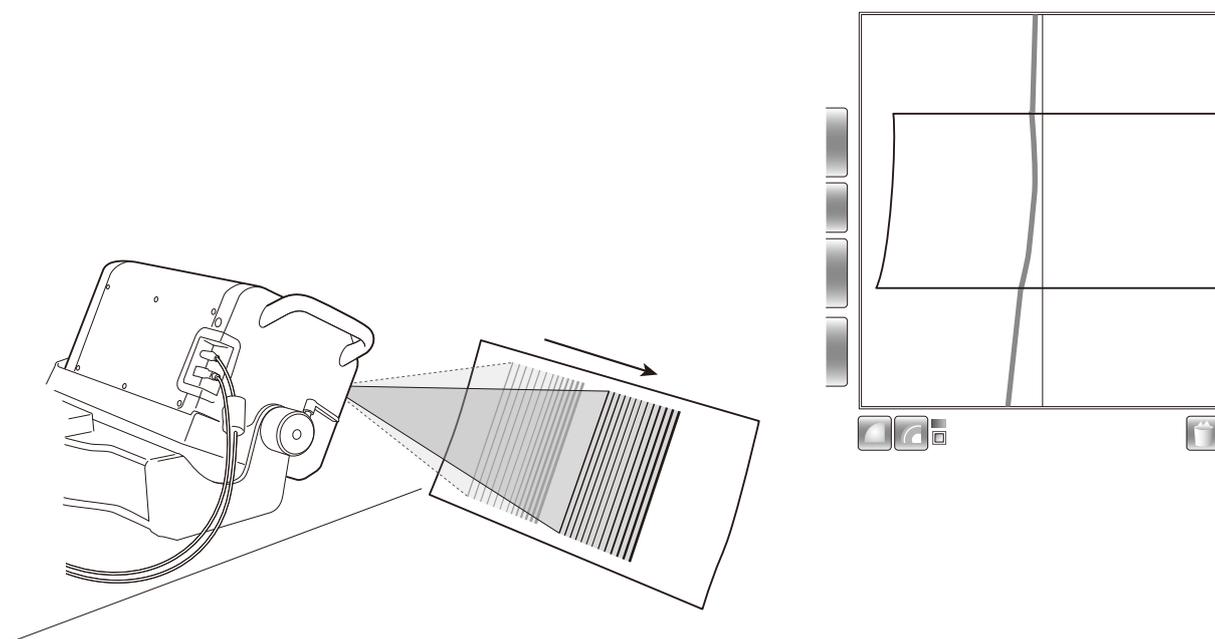

## ■ Scanning (Image)

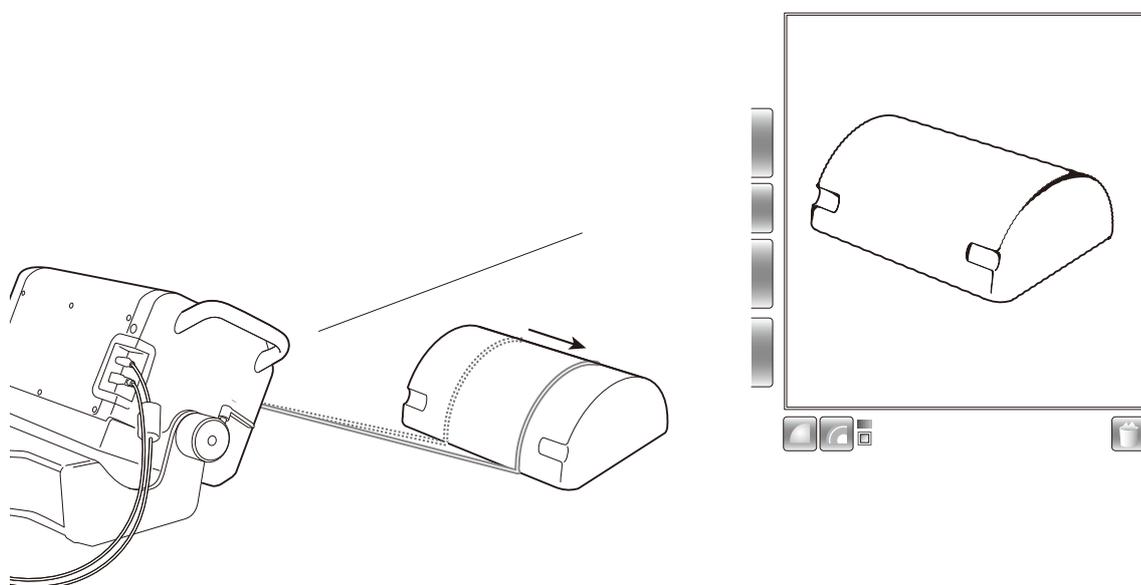

# Troubleshooting

If you have some problems when using the RANGE7/5, please refer to the following table to check on the situation. The RANGE7/5 operation is controlled by the 3D processing software "RANGE VIEWER". The RANGE VIEWER monitors the RANGE7/5 condition, and displays the appropriate messages.

Please also refer to the "Error Message" section in the RANGE VIEWER Reference Manual.


Symptoms	Item to check / Possible causes	Corrective actions
Power is not turned ON.	<ul style="list-style-type: none"> <li>Is the AC adapter connected?</li> <li>Is the AC cord of the AC adapter properly connected to the main outlet?</li> </ul>	<ul style="list-style-type: none"> <li>Check the AC adaptor and AC cord connections. If not connected, do so properly.</li> </ul>
The indicator does not light yellow when the power switch is pressed.	<ul style="list-style-type: none"> <li>Is the green indicator on the AC adapter ON?</li> </ul>	<ul style="list-style-type: none"> <li>Connect the RANGE7/5 AC adapter to a 100 to 240Vac (50 to 60Hz) main outlet before use.</li> </ul>
The yellow indicator went off without turning OFF the power.	<ul style="list-style-type: none"> <li>Did you disconnect the USB cable during measurement?</li> </ul>	<ul style="list-style-type: none"> <li>Connect the USB cable properly, and turn ON the RANGE7/5 power again.</li> <li>* The RANGE7/5 is connected to a PC using the USB cable, and measurements are controlled by the 3D processing software "RANGE VIEWER". When the USB cable is disconnected during measurement, the RANGE7/5 power turns off.</li> </ul>
	<ul style="list-style-type: none"> <li>Is the AC adapter connected?</li> <li>Is the AC cord of the AC adapter properly connected to the designated main outlet?</li> </ul>	<ul style="list-style-type: none"> <li>Check the AC adaptor and AC cord connections. If not connected, do so properly.</li> <li>Connect the RANGE7/5 AC adapter to 100 to 240Vac (50 to 60Hz) main outlet before use.</li> </ul>
Does not scan	<ul style="list-style-type: none"> <li>Is the RANGE7/5 properly connected to a PC using the USB cable?</li> <li>Is the lens properly attached?</li> <li>Is the RANGE7/5 power turned ON?</li> </ul>	<ul style="list-style-type: none"> <li>Check that the RANGE7/5 is properly connected to a PC using the USB cable. Also check that the USB cable B plug is securely connected to the RANGE7/5 USB connection port.</li> <li>Properly attach the lens according to object size, or distance to said object.</li> <li>Confirm that the power button is lit yellow-green when the power button in the upper right part of the rear panel of the RANGE7/5 is pressed.</li> </ul>
The RANGE7/5 exterior becomes hot	<ul style="list-style-type: none"> <li>Is the RANGE7/5 vent blocked?</li> </ul>	<ul style="list-style-type: none"> <li>Do not block the vent.</li> <li>* Doing so may cause affect air circulation and cause the internal temperature of the RANGE7/5 to rise.</li> </ul>

# Other Information

## ■ Measuring Principles

### <Basic Principle>

The RANGE7/5 uses the light sectioning method to emit a horizontal stripe light through a cylindrical lens to the object. The reflected light from the object is received by the CMOS sensor, and then converted by triangulation into distance information. This process is repeated by scanning the stripe light vertically on the object surface using a Galvano mirror, to obtain a 3D image data of the object.

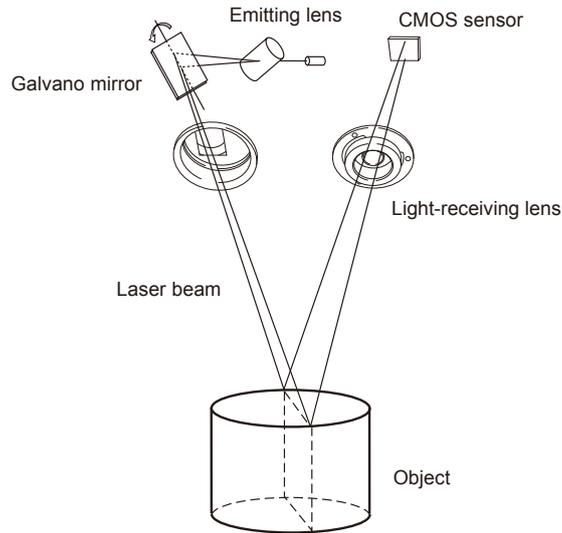


### <High-Speed Image Processing Circuit>

The stripe light is scanned on the CMOS image plane at one horizontal line per frame, and the CMOS is driven so that the block readout start position is shifted one line per frame. Approximately 1400 frames are acquired.

- Frame rate: 600 frames/sec.
- Block readout: 350 lines

The output signal from the CMOS sensor is then converted into a digital signal, which is then subjected to digital signal processing. The processed data is finally transferred to the computer via the USB interface.

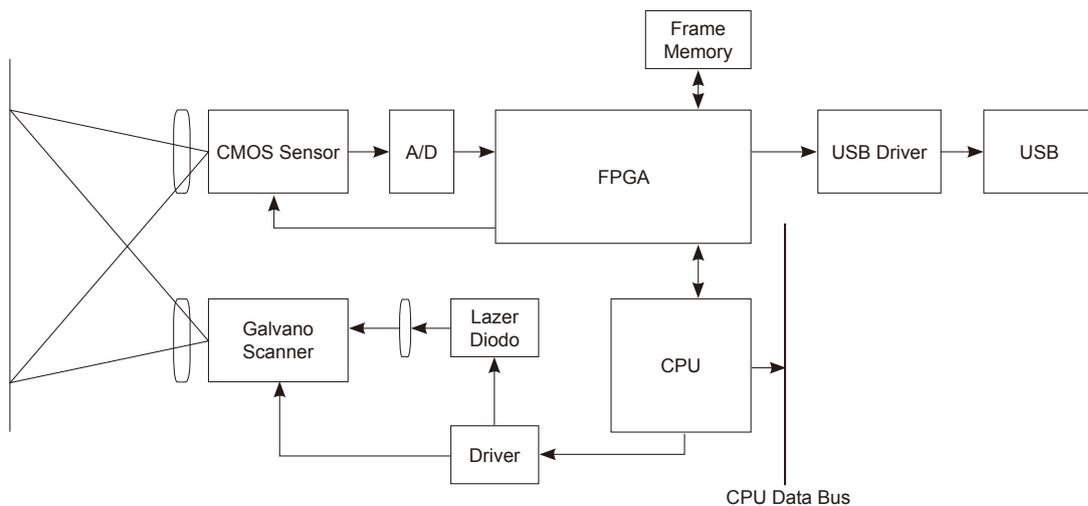

### <Time center of gravity and Space center of gravity>

With this instrument, 3D images are obtained by calculating the time center of gravity of each pixel of the CMOS sensor. With this method, compared to the space center of gravity, use of the time center of gravity reduces the influence of sensitivity variations of the CMOS sensor pixels and variations in object brightness.

## ■ Specifications

MODEL NAME		KONICA MINOLTA RANGE7				
Measuring Method		Triangulation by light sectioning method				
Light-Source		Semiconductor laser $\lambda = 660 \text{ nm}$				
Laser Classification		Class 2 (IEC60825-1 edition2)				
Sensor	Name	CMOS Photo diode				
	Pixel	1.31 Mega Pixel (1280 x 1024)				
Measuring Distance (mm)		450 to 800 (Distance from Light-Receiving Lens *1)				
Light Receiving Lens (Replaceable)		TELE / WIDE				
Measuring Range (mm)	MultiFocus mode Disabled	Lens	TELE	TELE	WIDE	WIDE
		Distance	450	800	450	800
		X-Y size	79 × 99	141 × 176	150 × 188	267 × 334
		Z	54	97	109	194
		Meas.pitch of X-Y	0.08	0.14	0.16	0.28
	MultiFocus mode Enabled	Lens	TELE	TELE	WIDE	WIDE
		Distance	462	781	475	766
		X-Y size	81 × 102	138 × 172	159 × 199	256 × 320
		Z	54	97	109	194
		Meas.pitch of X-Y	0.08	0.13	0.08	0.25
Accuracy (Interglobuler distance)*2		±40 $\mu\text{m}$				
Precision (Z, $\sigma$ )*3		4 $\mu\text{m}$				
Auto Focus		available				
Auto Exposure		available				
Scanning Time		about 2 sec. per scan				
Preview Function		available (about 0.4 sec. per scan)				
Environment Brightness		500 lx or less				
File Format *4		INPUT/OUTPUT: .rgv, .rvm, .rmk (Original format), OUT only: .stl				
Output Interface		USB 2.0 HighSpeed				
Power Supply		AC adapter 100-240Vac (50-60 Hz), 1.4A				
External Dimensions (mm)		295 (W) x 190 (H) x 200 (D) * exclude the protruding portion of the lens and handle				
Weight (kg)		about 6.7				
Operating Condition		10 to 40°C (relative humidity 65% or less, with no condensation)				
Storage Condition		-10 to 50°C (relative humidity 85% or less [at 35°C] , with no condensation)				
Remarks (Controlled Method)		Controlled via dedicated PC software "RANGE VIEWER"				

\*1 Due to the difference of origins on the measurement reference surface and measurement data, the Z axis coordinate has an offset of about 120 mm for the measuring distance.

\*2 When the interglobuler distance for the ball bars (2 globes) specified in VDI/VDE2634-2 is measured under the following conditions defined by KONICA MINOLTA :

Our conditions: Temperature 20±1°C / Using the TELE lens / Distance 450 mm / Warming up 20 mins. / Using the KONICA MINOLTA processing software / With Calibration / Object to be measured: Standard KONICA MINOLTA (2 globes) instrument / Position of object to be measured: KONICA MINOLTA standard position (10 locations within the measurement space) / Does not cover the uncertainty over the pricing of the standard instrument.

\*3 Measuring conditions: Temperature 20±1°C / Using the TELE lens / Distance 450 mm / Warming up 20 mins. / Using the KONICA MINOLTA processing software / Object to be measured: KONICA MINOLTA reference plain chart / 1 $\sigma$

\*4 Using the KONICA MINOLTA "RANGE VIEWER" processing software

• The RANGE7 includes the eT-Kernel/Compact from sSOL Co., Ltd.

MODEL NAME		KONICA MINOLTA RANGE5		
Measuring Method		Triangulation by light sectioning method		
Light-Source		Semiconductor laser $\lambda = 660 \text{ nm}$		
Laser Classification		Class 2 (IEC60825-1 edition2)		
Sensor	Name	CMOS Photo diode		
	Pixel	1.31 Mega Pixel (1280 x 1024)		
Measuring Distance (mm)		450 to 800 (Distance from Light-Receiving Lens *1)		
Measuring Range (mm)	MultiFocus mode Disabled	Distance	450	800
		X-Y size	150 × 188	267 × 334
		Z	109	194
		Meas. pitch of X-Y	0.16	0.28
	MultiFocus mode Enabled	Distance	475	766
		X-Y size	159 × 199	256 × 320
		Z	109	194
		Meas. pitch of X-Y	0.08	0.25
Accuracy (Interglobuler distance) *2		±80 $\mu\text{m}$		
Precision (Z, $\sigma$ )*3		8 $\mu\text{m}$		
Auto Focus		available		
Auto Exposure		available		
Scanning Time		about 2 sec. per scan		
Preview Function		available (about 0.4 sec. per scan)		
Environment Brightness		500 lx or less		
File Format *4		INPUT/OUTPUT: .rgv, .rvm, .rmk (Original format), OUT only: .stl		
Output Interface		USB 2.0 HighSpeed		
Power Supply		AC adapter 100-240Vac (50-60 Hz), 1.4A		
External Dimensions (mm)		295 (W) × 190 (H) × 200 (D) * exclude the protruding portion of the lens and handle		
Weight (kg)		about 6.7		
Operating Condition		10 to 40°C (relative humidity 65% or less, with no condensation)		
Storage Condition		-10 to 50°C (relative humidity 85% or less [at 35°C] , with no condensation)		
Remarks (Controlled Method)		Controlled via dedicated PC software "RANGE VIEWER"		

\*1 Due to the difference of origins on the measurement reference surface and measurement data, the Z axis coordinate has an offset of about 120 mm for the measuring distance.

\*2 When the interglobuler distance for the ball bars (2 globes) specified in VDI/VDE2634-2 is measured under the following conditions defined by KONICA MINOLTA :

Our conditions: Temperature 20±1°C / Distance 450 mm / Warming up 20 mins. / Using the KONICA MINOLTA processing software / With Calibration / Object to be measured: Standard KONICA MINOLTA (2 globes) instrument / Position of object to be measured: KONICA MINOLTA standard position (10 locations within the measurement space)/ Does not cover the uncertainty over the pricing of the standard instrument.

\*3 Measuring conditions: Temperature 20±1°C / Distance 450 mm / Warming up 20 mins. / Using the KONICA MINOLTA processing software / Object to be measured: KONICA MINOLTA reference plain chart / 1 $\sigma$

\*4 Using the KONICA MINOLTA "RANGE VIEWER" processing software

• The RANGE5 includes the eT-Kernel/Compact from sSOL Co., Ltd.



KONICA MINOLTA